TR8200 Thermostat User Manual ver 1.3

Save money by setting program schedules

This thermostat can be individual 7-day programmable. For each day of the week you are able to have 4 timed set temperature schedules.

Program	Start Time		Setpoint	Explanation
1	WAKE	07:00	22 °C	Set to the time you would like to wake to and the temperature you want during the morning, until you left for the day.
2	LEAVE	09:30	16 °C	Set to the time you leave home and the temperature you wish your home to maintain while you are away at work perhaps.
3	RETURN	16:30	22 °C	Set to the time you return home at end of the day and the temperature you want during evening until bed time.
4	SLEEP	22:30	16 °C	Set to the time you sleep and the temperature you want overnight(usually a comfortable and energy saving temperature).

Above are default program schedules, to make changes, follow easy steps as below.

In 7 day program mode

1. Press [Set Schedule], you will see day display flashing.
2. Use + or − adjust the day to the day you wish to start programming or to the day you wish to edit an existing event or program. (Press [All Days] to select all days of the week, to cancel selecting all days of the week, press [All Days] again.)
3. Press [Next], the LCD will show program 1 with the time display flashing.
4. Use + or − adjust the time you wish the program 1 event to commence for the currently selected day or days.
5. Press [Next], the LCD will show a temperature value flashing.
6. Use + or − set the desired heating temperature to be maintained for the program 1 event.
7. Press [Next], now the LCD will show program 2 with the time display flashing, signifying the second daily event is now being programmed.
8. Repeat step 4,5,6 to set remaining programs. Press [DONE] to store and exit.

Note: It is faster to program the same schedule for the entire week and then to adjust the exceptional days.

In 5+2 day program mode

1. Press [Set Schedule], you will see the time flashing.
2. Use + or − to set your weekday Wake time(Mon-Fri), then press [Next]
3. Use + or − to set the temperature for this time period, then press [Next]
4. Set time and temperature for the next time period(Leave). Repeat steps 2 and 3 for each time period of the weekday.
5. Press [Next] to move to the weekend(sat-sun) time periods settings.
6. Press [DONE] to save and exit.

Day 1 - 5, refers to the weekday(Monday to Friday)
Day 6 - 7, refers to the weekend(Saturday and Sunday)

Note: During setting programs, press [Delete] (if visible) will clear a program entry and thermostat will maintain the temperature setpoint of the last executed program until the beginning of the next program.

Lock the Keypad

To lock the keypad, press and hold the bottom left corner of display for 5 seconds, you will see a lock symbol . To unlock, repeat the steps above.

Reset to Factory Settings

With thermostat turned off, press and hold the up left corner of display for 5 seconds until you can see RESET on LCD.

Temporary Temperature Override

Touch the temperature display, and it will start to flash. Use + or − to adjust. Press [DONE] to accept, and you will see "O/RIDE" on LCD. Thermostat will maintain the new set temperature until the next programmed event(comfort level). To cancel the override setting, press [Run Schedule]

Installation and Wiring

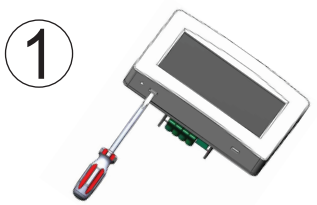

Carefully separate the front half of the thermostat from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the thermostat

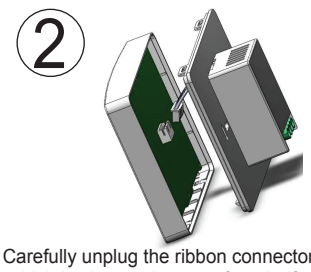

Carefully unplug the ribbon connector which is plugged in to the front half of the thermostat

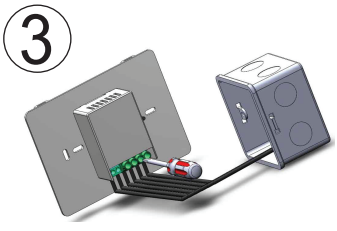

Place the thermostat front half somewhere safe. Terminate the thermostat as shown in the diagrams below

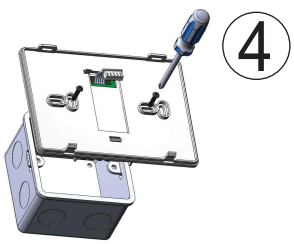

Screw the thermostat back plate on to the back box

Re-connect the thermostat ribbon cable and clip the two halves together

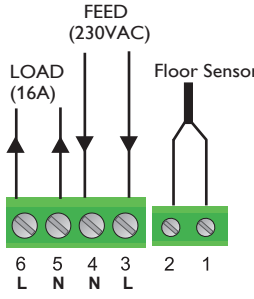

This product should be installedby a qualified electrician.